



# Light Gauge Metal Roof and Wall Panels

Installation Guide for Delta Rib, Delta Rib III, Nor-Clad®, Strata Rib® & 2½ Corrugated

## Trim Locations

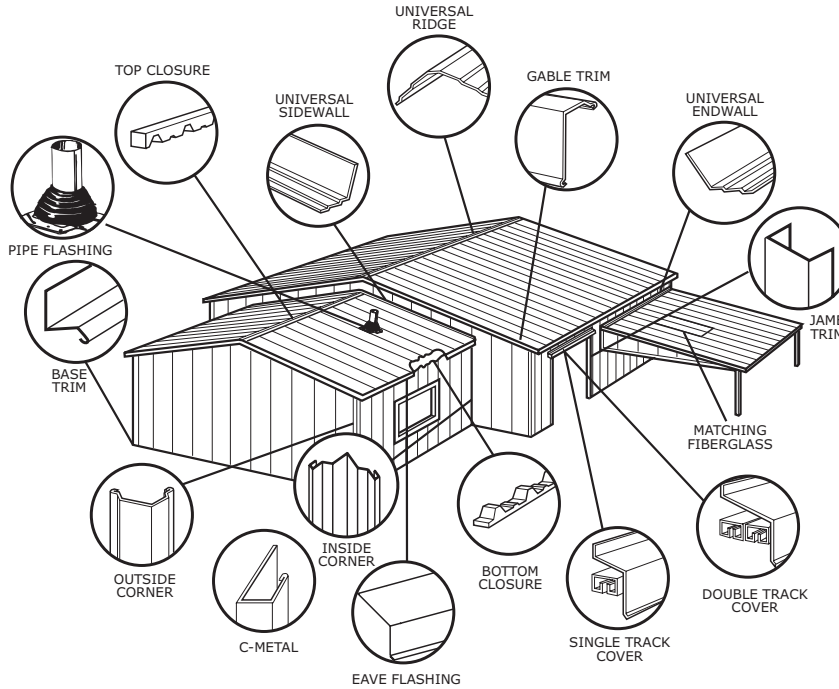

## Fastener Placement

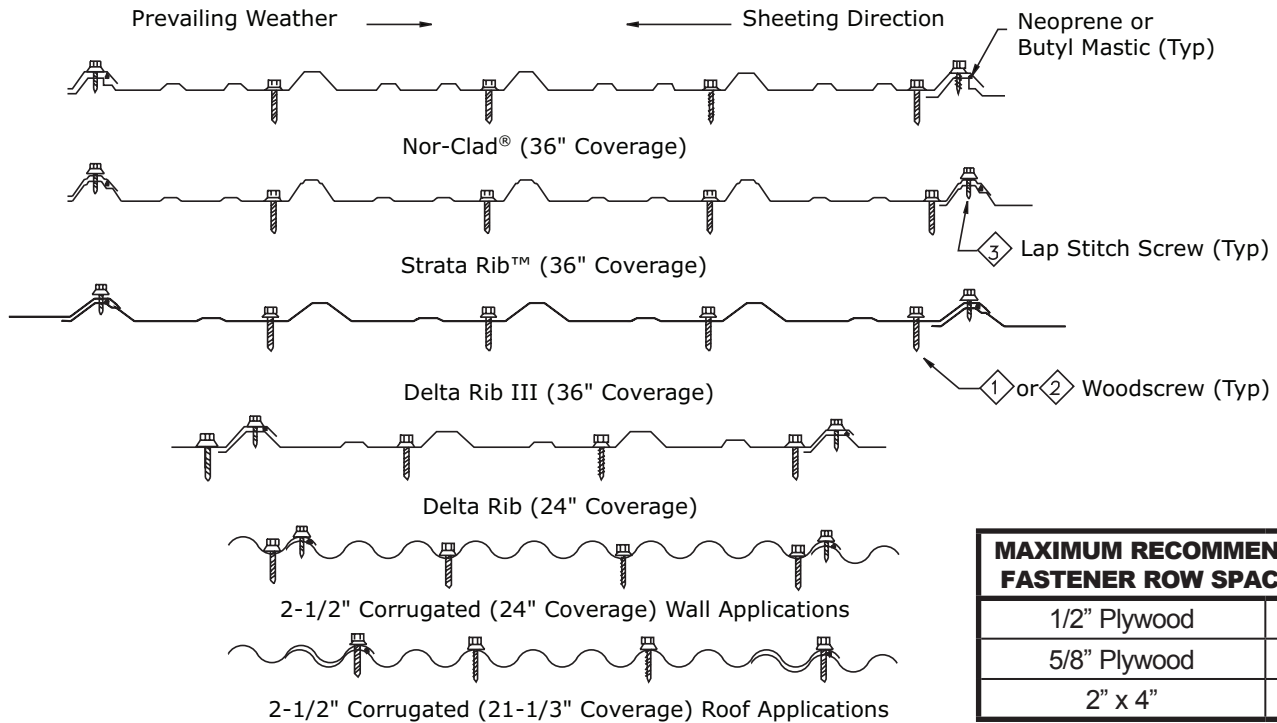

**Notes:**

Lap panels away from prevailing weather. Use only those accessories specifically designed for use with this product. Use only galvanized or Zinco-lume-coated fasteners. Isolate roofing and flashings from contact with dissimilar metals. Fastener selection will vary based upon substrate. The use of neoprene or butyl mastic tape along the sidelaps, as shown above, is always recommended for roofs. Lap stitch screws should be placed @ 16" o.c. maximum.

The maximum recommended fastener row spacing applies to mild weather conditions of 80 mph winds and an exposure rating of "B" (protected) for typical buildings and substrate.