


# Commercial & Industrial Building Systems

## Installation, Flashings & Details Guide

### Fastener Placement

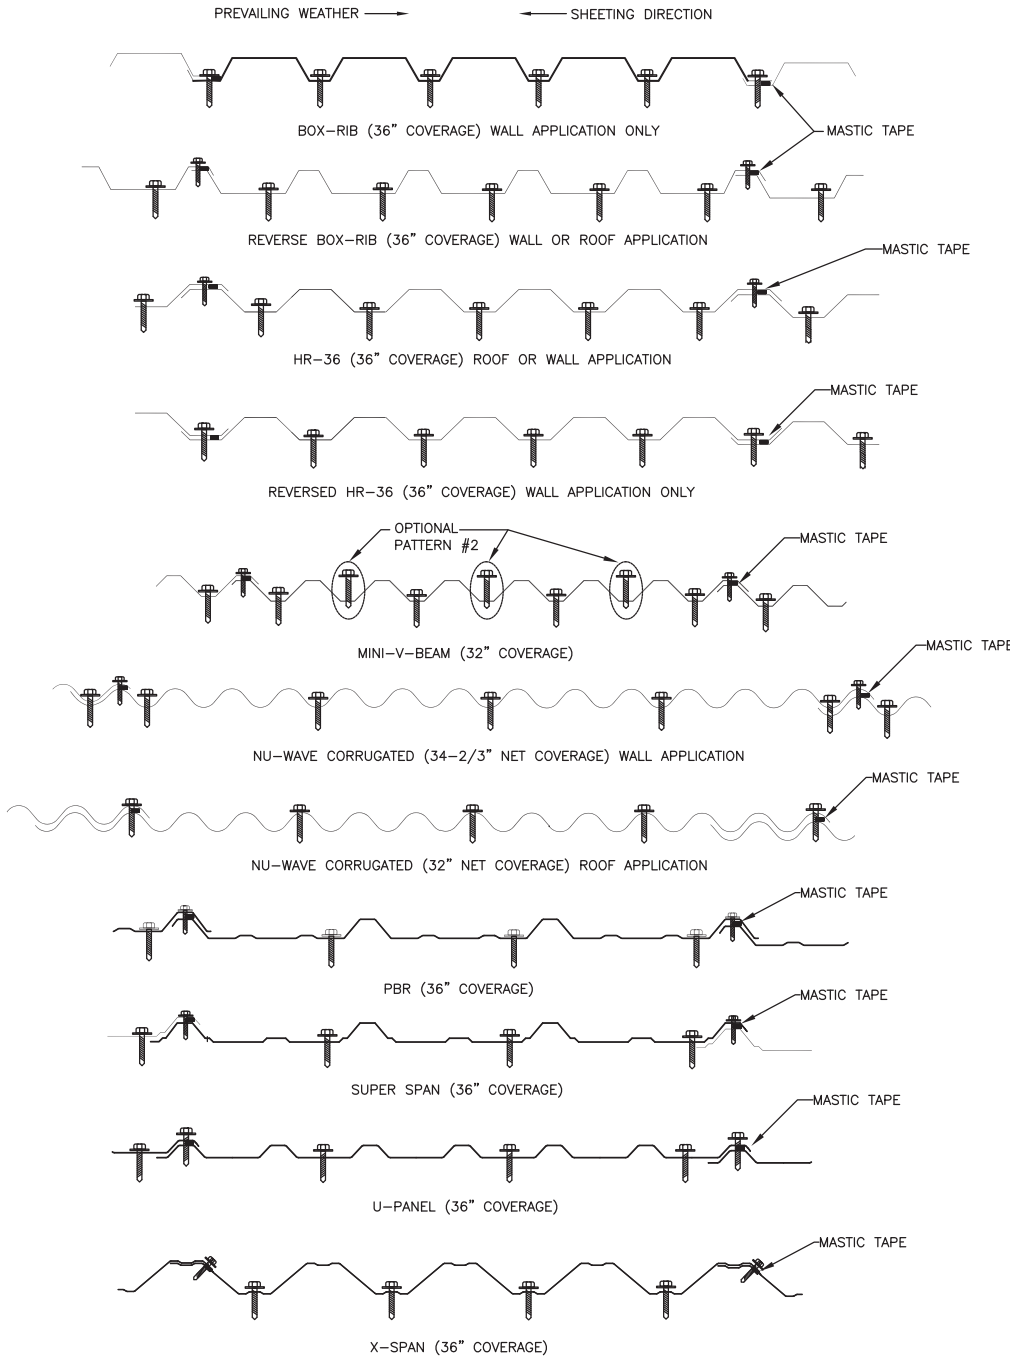

**Box Rib**  
(36" Coverage)  
Wall application only

**Reverse Box Rib**  
(36" Coverage)  
Roof or Wall application

**HR-36®**  
(36" Coverage)  
Roof or Wall application

**Reversed HR-36**  
Wall application only

**Mini-V-Beam**  
(32" Coverage)  
Roof or Wall application

**Nu-Wave® Corrugated**  
(34 2/3" coverage) Wall application

**Nu-Wave Corrugated**  
(32" Coverage) Roof Application

**PBR**  
(36" Coverage)

**Super-Span®**  
(36" Coverage)

**U-Panel**  
(36" Coverage)

**X-Span®**  
(36" Coverage)

**Note:** Lap panels away from prevailing weather. Use only those accessories specifically designed for use with this product. Use only galvanized or Zinalume®-coated fasteners. Isolate roofing and flashings from contact with dissimilar metals. Fastener selection will vary based upon substrate. The use of butyl mastic tape along the sidelaps, as shown above, is always recommended for roof panels. Space lap screws @ 18" o.c. maximum.